

PALLET WRAPPER - 1-GPPW-1520

To set wrapping programs:

1. Turn on machine.
2. Should show 'Menu' on display, if not press until Menu shows.
3. Press on keypad to get 'Programs'.

Up/Down - Auto Mode:

1. Once in 'Programs', press on Keypad.
2. Press Green Button to start wrapping cycle.

Manual Mode:

1. Once in 'Programs', Press on Keypad.
2. Use to start the turntable.
3. Use to make the Film Carriage go up.
4. Use to bring it down again.

Up Only, Quick Wrap Mode:

1. Once in 'Programs', press on Keypad.
2. Press green button to start wrapping cycle.
3. The film carriage will stop at the top and the cycle is complete. Cut the film

Top-Sheet Mode:

1. Once in 'programs', pres on Keypad.
2. Press green button to start wrapping cycle.
3. When the pallet has been wrapped at the bottom the film carriage will rise to the top of the Pallet and wrap it once and stop. Apply the top sheet now then press the Green Button again, the top sheet will be wrapped in and the machine will complete the cycle.



Changing Parameters:

To change the amount of the top or bottom wraps press until the Menu shows.

Press which gets to Param set.

Press again to get to Top Cycle.

Press until Top Cycle number is highlighted.

Select number of Top Cycles needed from the number pad on Keypad.

Press to confirm.

Press to get back to the Param set.

Press to get to Bottom Cycle.

Press until Bottom Cycle number is highlighted.

Select number of Bottom Cycles needed from the number pad on Keypad.

Press to confirm.

Press to get back to the Param set.

To change to number of times the Pallet is wrapped up + down press

Press until the number of up + down cycles is highlighted.

Select number from the Number Pad on the Keypad.

Press to confirm.

Use to get back to select Param.

Press again to get back to Menu



02 9452-3566

sales@getpacked.com.au