

PACKMATE R-WRAPPER WRAP TENSION OPTIONS

RECOMMENDED

Minimum Effort.


One Hand Possible with practice, Two hands probable to begin!

RECOMMENDED

At Speed or At Height

LEVERAGE TENSION


1, Travel forward, parallel to side of pallet. Steer guide roller to pivot point around each corner of the pallet. Squeeze wrap brake under control handle to tension film during pivot turn.

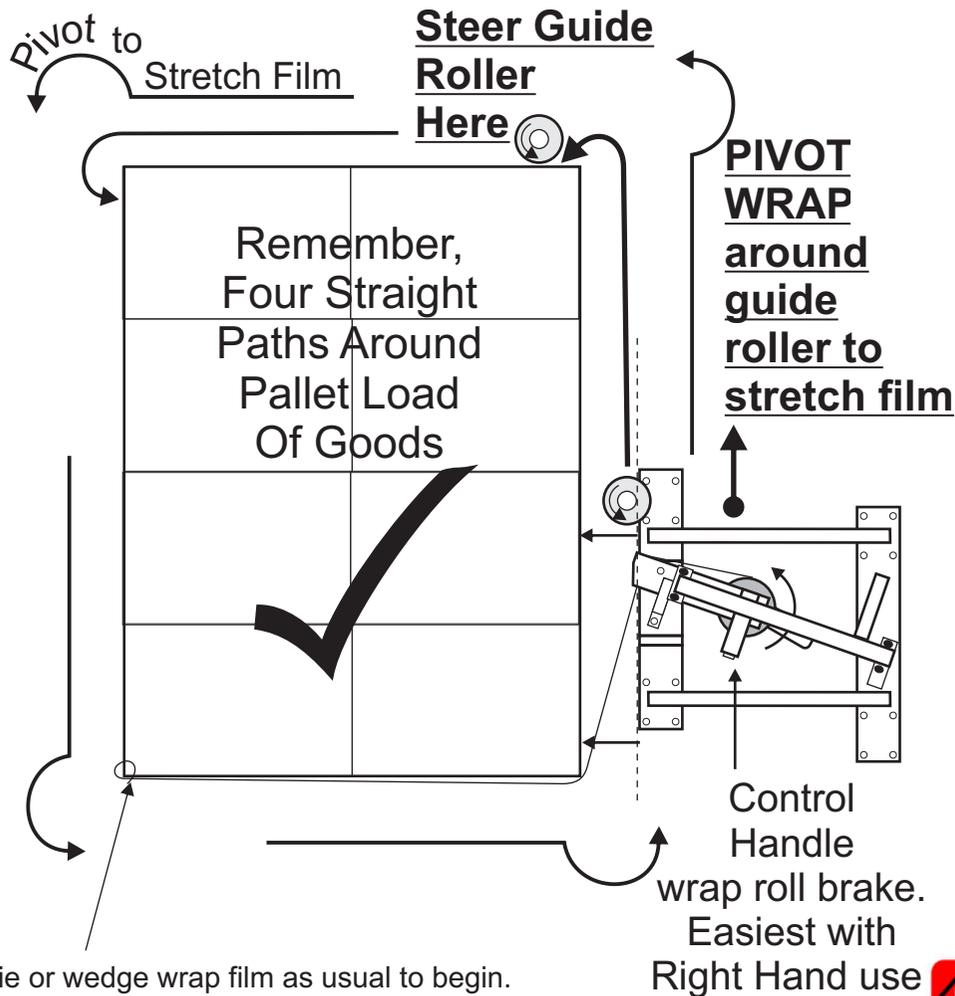

Tie or wedge wrap film as usual to begin. Start tension after first overlap.

STRETCH TENSION

1, Travel forward, parallel to side of pallet, steer outward past each corner of pallet with wrap brake engaged under control handle. Change direction once film is stretched to desired tension. Touch goods with wrap then release roll brake.

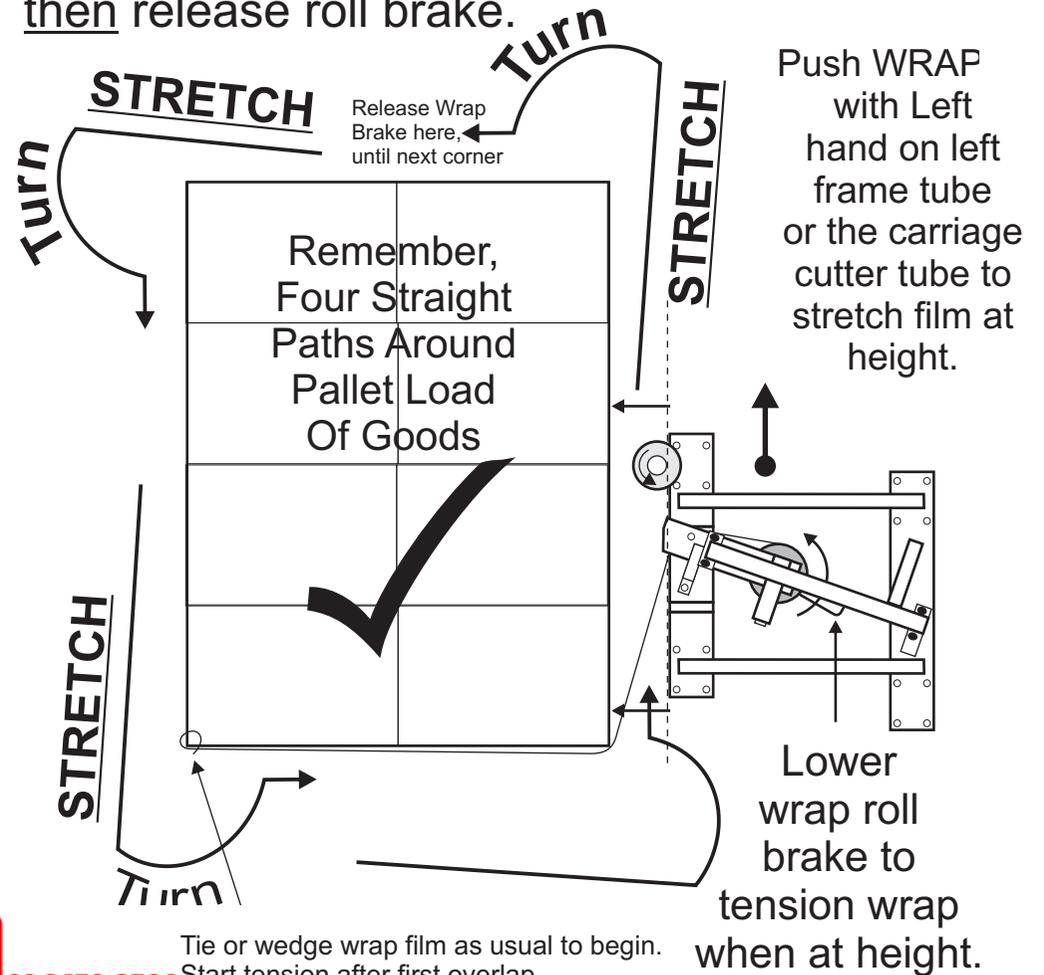

Tie or wedge wrap film as usual to begin. Start tension after first overlap.



02 9452-3566

sales@getpacked.com.au